



RC-5 Codes

Dokumentation

RC-5 Codes

 Die Key Codes gelten nur für Set Top Boxen der Modell-Reihen P4x und P5x

- **IR Protocol:** RC5
- **System:** 0x0a
- **Carrier frequency:** 36 kHz

Key	Key Name	Code (hex)
1	Profile	0x0F
2	Power TV	0x0C
3	Digit 1	0x01
4	Digit 2	0x02
5	Digit 3	0x03
6	Digit 4	0x04
7	Digit 5	0x05
8	Digit 6	0x06
9	Digit 7	0x07
10	Digit 8	0x08
11	Digit 9	0x09
12	Back in Search	0x26
13	Digit 0	0x00
14	Text	0x2E
15	INFO	0x41
16	Next Page	0x4A
17	Search	0x2B
18	Up	0x50
19	Left	0x55
20	Ok	0x57

Key	Key Name	Code (hex)
21	Right	0x56
22	Down	0x51
23	Back	0x40
24	Previous Page	0x49
25	TV	0x71
26	Volume Up	0x10
27	Home	0x2F
28	Channel Up	0x20
29	Volume Down	0x11
30	Mute	0x0D
31	Channel Down	0x21
32	Rewind	0x32
33	Play/Pause	0x35
34	Fast Forward	0x34
35	Previous	0x39
36	Stop	0x36
37	Next	0x37
38	Red	0x6B
39	Green	0x6C
40	Yellow	0x6D
41	Blue	0x6E

